



**Thank You** for purchasing the SHS PM-600 / PM-400 Powered Mixers. These units are warranted for a period of 1 year from the date of purchase against manufacturer defects or workmanship. This transferrable warranty does not cover misuse, abuse or negligence. In the event of a defect please return the unit, *with receipt*, to the place of purchase.



***Please complete and return with proof of purchase to:***

SHS International  
1922 W. Banta Rd  
Indianapolis Indiana 46217

## WARRANTY REGISTRATION

*Complete and Return within 10 days of Purchase*

Model # \_\_\_\_\_ Date Purchased \_\_\_\_ / \_\_\_\_ / \_\_\_\_ Price \_\_\_\_\_

Last Name \_\_\_\_\_ First Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_

Place of Purchase \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_

E-mail \_\_\_\_\_

**PM-600  
PM-400  
users guide**



**BUY  
TOUGH**

# PM-800 PM-400

The PM-600 powered mixer has a total output of 150 watts RMS / 300 watts peak while the PM-400 powered mixer has a total output of 100 watts RMS / 200 peak. The PM-600 and PM-400 contain independent power and equalization sections allowing you to control front of house mix.

## Basic outline of mixer controls

### Channel Controls

Treble - Adjusts the channel's high frequency amount.

Bass - Adjusts the channel's low frequency amount.

Volume Level - Controls the amount of the channel's input signal.

Reverb - Level control for reverb.

High Z Input - Accepts High Z ( 1/4" ) non-balanced input.

Low Z Input - Accepts Low Z balanced input.

### Master Controls

Treble - Controls the amount Treble for ALL channels.

Middle - Controls the amount Mids for ALL channels.

Bass - Controls the amount Bass for ALL channels.

Master Reverb Level- Master level control for reverb on all channels.

Master Output Level- Master level control for main output.

CD/Tape RCA Inputs- Allows RCA cable input and output

(PM-600 only) connection for any CD or Tape source.

Effects Loop Send/Return- (PM-600 only) Allows 1/4" connection of

additional effect devices. (Reverb, Delay, Multi-Effect, etc.)

Reverb Footswitch Input (PM-600 only) On/Off control for internal

reverb. (footswitch not included)

Power- Main On/Off switch.

### Rear Controls

Main Speaker Out- Powers outputs for MAIN speakers.

# PM-800 PM-400

## Basic hook-up

